


# MASCHIATORE ATTACCO CODOLO CILINDRICO DIN 1835 B+E CON COMPENSAZIONE ASSIALE

CYLINDRICAL SHANK TAPPING CHUCK DIN 1835 B+E WITH AXIAL COMPENSATION  
 GEWINDESCHNEIDFUTTER MIT ZYLINDERSCHAFT DIN 1835 B+E MIT DOPPEL LÄNGENAUSGLEICH  
 APPAREIL À TARAUDER AVEC ATTACHEMENT CYLINDRIQUE DIN 1835 B+E AVEC COMPENSATION AXIALE  
 MANDRINO DE ROSCADO CON MANGO CILÍNDRICO DIN 1835 B+E CON COMPENSACIÓN AXIAL

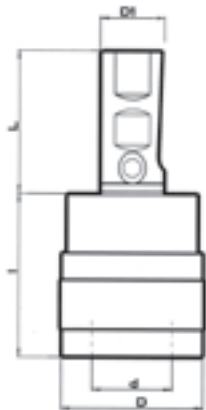

CODICE CODE BESTELL NR CODE CÓDIGO	ATTACCO SHANK AUFNAHMEN ATTACHEMENT MANGO DI	d	D	l	L	Capacità Maschiatura Tap capacity Bereich Capacité de taraudage Capacidad macho	Bussola Bush Einsatz Douille Casquillo	Rientro Compr. Drück Compr. Retorno	Sflam. Ext. Zug Ext. Ext.
32400/D20	20	19	38	41	50	M3-M12	19/..	9	9
32400/D25	25	19	38	41	56	M3-M12	19/..	9	9
32400/D32	32	19	38	41	61	M3-M12	19/..	9	9
32400/D40	40	19	38	41	72	M3-M12	19/..	9	9
32600/D20*	20	31	55	63	75	M6-M20	31/..	15	15
32600/D25	25	31	55	63	56	M6-M20	31/..	15	15
32600/D32	32	31	55	63	61	M6-M20	31/..	15	15
32600/D40	40	31	55	63	72	M6-M20	31/..	15	15
32800/D32	32	48	79	109	61	M14-M33	48/..	24	24
32800/D40	40	48	79	98	72	M14-M33	48/..	24	24
32900/D40	40	60	98	121	72	M22-M48	60/..	26	26

\* Non a norma DIN 1835 B+E  
 \* Not as Standard DIN 1835 B+E  
 \* Nicht nach DIN 1835 B+E  
 \* Non à norme DIN 1835 B+E  
 \* No como estándar DIN 1835 B + E

## Principalmente usati sui torni a controllo numerico

Mainly used on numeric controlled lathes

Verwendung auf CNC Drehmaschinen sowie mit jeglichen Adaptern universell verwendbar

Utilisé sur machines CN

Usado principalmente en tornos de control numérico